200 series

Temperature Monitoring eLock with Access Control

((WIRELESS OR ETHERNET READY))



Temperature monitoring-only and access control-only units available

Note: temperature probe cable is longer than shown. See back page for minimum system requirements.

CompX eLock[®] eliminates manual temperature logging.

- → Prevents human error
- → Automatically records temperature at programmed intervals
- → Data history is archived and easily accessible

Temperature Monitoring:

- Utilizes 802.11g wireless protocol or Ethernet communication
- Escalating notification system sends temperature "out of range" alerts via email, text message, voice call, or fax
- Audible and visual local alarming at eLock
- Records up to 500,000 temperature data points and provides programmable charts, graphs and reports
- Standard temperature range 100°C to -40°C;
 Ultra low version to -100°C
- Programming can be done manually on user friendly LCD blue backlit screen or through LockView[®] software^{*}
 *Sold separately

Access Control:

- 3.000 users/supervisors codes
- LockView software provides an Audit Trail of the last 15,000 access attempts; including date, time and user name
- Five modes of access: Keypad, Proximity card*
 HID, iCLASS, MiFARE and DESFire smart cards
 *Use existing identification cards
- Motor-driven latching mechanism provides the convenience of automatic relocking
- Complies with Joint Commission standards and is 21 CFR Part 11 compliant




LockView 5Pro – sold separately – is easy to use, with many programmable options, and allows access to any eLock from any computer on the network.

LockView® software features:

- Provides a comprehensive audit trail of the last 15,000 access attempts; including date, time and user name
- Escalating notification system sends alerts via email; optional Short Message Service provides Text Message, Voice Messaging or Fax alerts
- Complies with Joint Commission standards and is 21 CFR Part 11 compliant
- LockView enables updates via the network to any eLock on the system. Updates can include:
 - User changes (Add / Delete / Modify Credentials)
 - eLock Changes (Add / Delete / Modify eLocks)
 - Access Rights changes
- Allows users to enter notes on actions taken following out-of-temperature range alerts
- eReports produces and sends customized temperature monitoring reports and access audit logs to designated personnel in either Excel or Rich Text formats. No need to remember to retrieve temperature data!

Minimum System Requirements

2GB RAM, 2GB free space on hard drive, 64bit Compatible, OS: Windows XP, Vista, 7. Pentium III 1.0 GHz or higher. Other configurations are acceptable; please consult factory for detailed information.

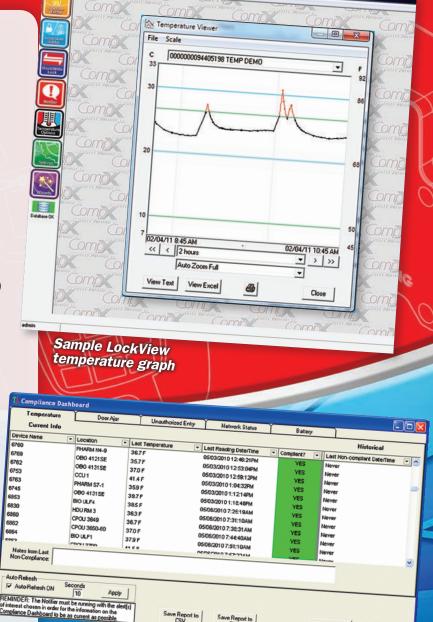





Compliance Dashboard provides at-a-glance

status of all eLocks on the network